

■ Use show log messages to view violations:

```
{master:0}
user@Switch-1> show log messages | match limit | match "0/6|0/9"
...
May  7 12:52:17  Switch-1 eswd[821]: ESWD_MAC_MOVE_LIMIT_BLOCK: MAC move limit (1) exceeded
at default for MAC address 00:26:88:02:74:86; shutting down interface ge-0/0/6.0
May  7 13:14:56  Switch-1 eswd[821]: ESWD_MAC_LIMIT_BLOCK: MAC limit (1) exceeded at ge-
0/0/9.0: shutting down the interface
```

■ Use show ethernet-switching interfaces to view interface state details:

```
{master:0}
user@Switch-1> show ethernet-switching interfaces
Interface      State  VLAN members  Tag  Tagging  Blocking
ge-0/0/6.0     down  default      0    untagged MAC move limit exceeded
ge-0/0/7.0     up    default      0    untagged unblocked
ge-0/0/8.0     up    default      0    untagged unblocked
ge-0/0/9.0     down  default      0    untagged MAC limit exceeded
me0.0          up    mgmt         0    untagged unblocked
```